

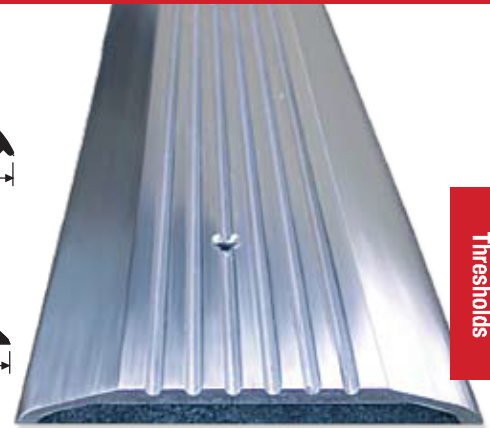
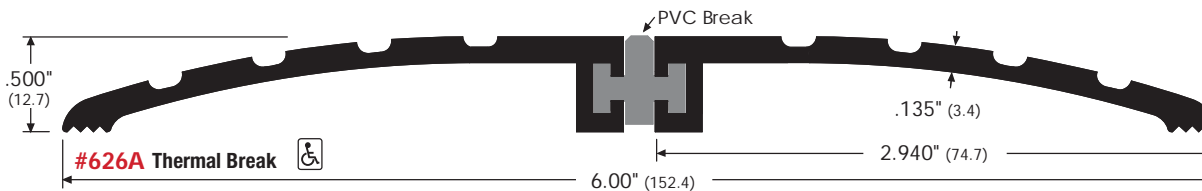
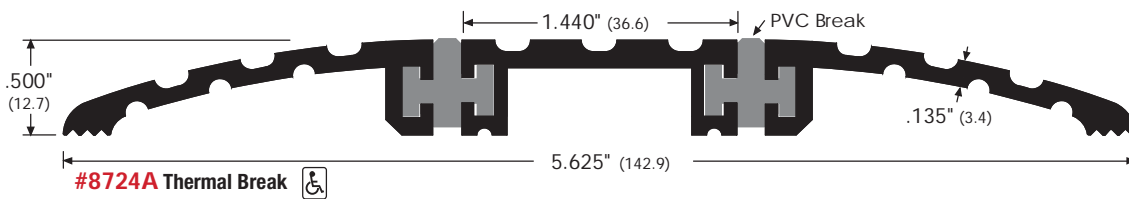
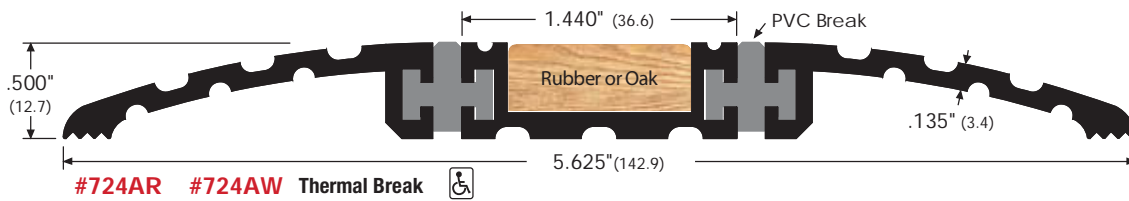
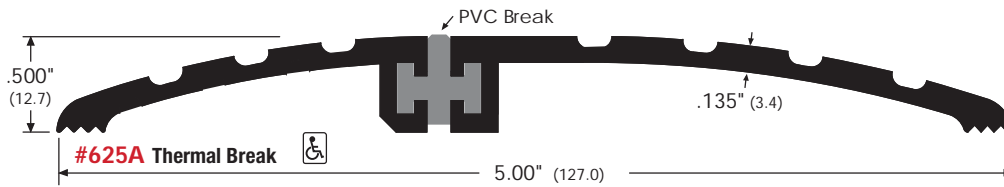


Utility Thresholds

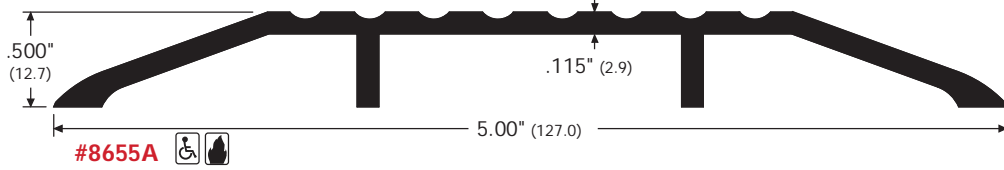

Note: A = Aluminum B = Bronze
R = Rubber W = Oak
Thresholds can be ordered with E (Epoxy Abrasive), EL (Epoxy Abrasive Photoluminescent) or V3 (Full Body Strength) options.

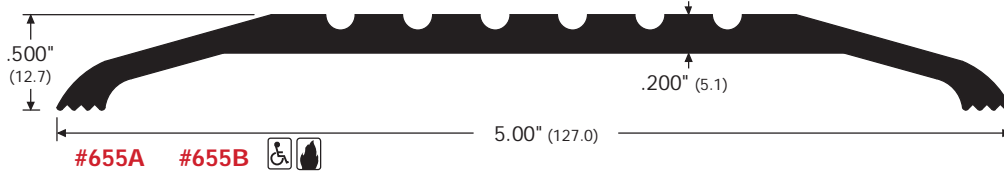

Thresholds

Which would you rather walk on or install?

Both pass the ANSI standard load test, but the ZERO threshold also passes the test of time and weight. The heavier-gauge material in our thresholds allows you to drill and screw right through and into concrete. Lighter-gauge thresholds can buckle and often loosen because screws cannot be tightened fully. Be sure you get the best....specify the heavier gauge when you need thresholds.

